


Instruction Sheet

BVX-ARM **BVX-ARM-K1** Installation Instructions

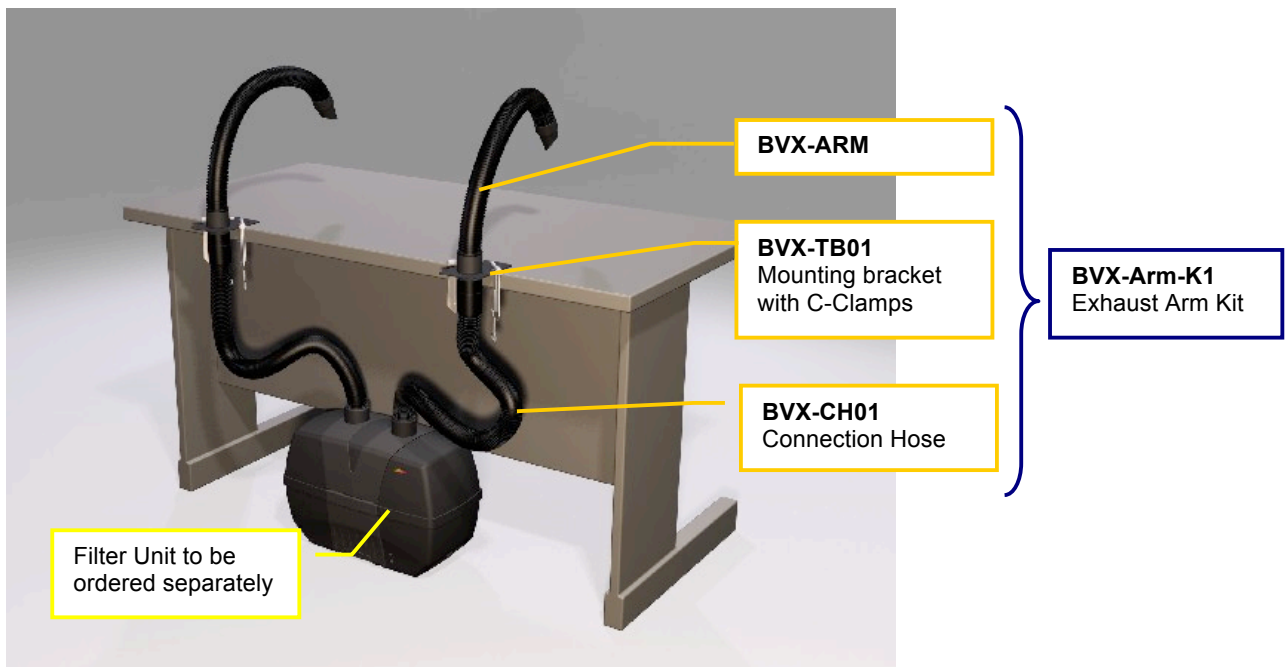

Fume Extraction Station using two BVX-ARM-K1 Kits

1. Unpacking and Inspection

Carefully unpack and examine items contained in cartons. Inspect for any damage that might have occurred in transit. If such damage has occurred, notify the carrier immediately. Claims for damage must be made by consignee to the carrier and should be reported to the manufacture.

2. Items Supplied

- BVX-ARM
- BVX-TB01 – only when Kit is ordered
- BVX-CH01 – only when Kit is ordered
- Installation Instructions

3. Installation

- Assemble exhaust arm by attaching nozzle to end of flex hose

If ordered as complete Kit continue as follows:

- Fasten **mounting bracket** to table top by either
 - Using supplied **C-clamps**
 - Or fastening bracket with screws to table (screws not supplied)

Note: *The mounting bracket has flanges on either side, which are of different diameter. The larger opening is used for the exhaust arm connection and should be on the upper side.*

- Use Connection Hose to connect lower flange of mounting bracket to filter unit
Hose cuffs will form a friction fit – no clamps required.
- Using BVX-ARM insert coupling end into large opening of mounting bracket.
- Position exhaust arm and nozzle close to fume source to optimize fume capture.

